



simple on/off!
.....

part B BAT

part A BATretainer



1

Place BATretainer ring on wheel head at an angle pivot on drive stops



2

Press BATretainer ring firmly down till secure, by running your hands around the edge.



3

Hold BAT above the BATretainer ring and align correctly before pressing down in place.



4

To remove the BAT, simply use a tool or your fingers to horizontally lift off the wheel.

take notice!

.....

- Your wheel has been manufactured to engineering tolerances of two thousandths of an inch.
- The retainer ring has been produced to the same tolerances and is a tight fit.
- Please take care when handling to avoid splinters.